

# ECO Mode Disabler Switch for the smart fortwo 453

## Installation / Owner's Manual

**Before starting the installation, remove the key from the ignition and read the instructions completely !!!**

Tools required:

Screwdriver – pliers – Trim Removal Tool

Function:


After starting the car, a switching pulse is generated automatically, which disables the ECO start / stop mode. ECO mode will remain disabled and can only be re-enabled by pressing the switch.

ECO Mode can be easily re-enabled by pressing the switch and holding, while turning on the ignition and then releasing the switch after 5 seconds.



Remove this side panel with a plastic trim removal tool.




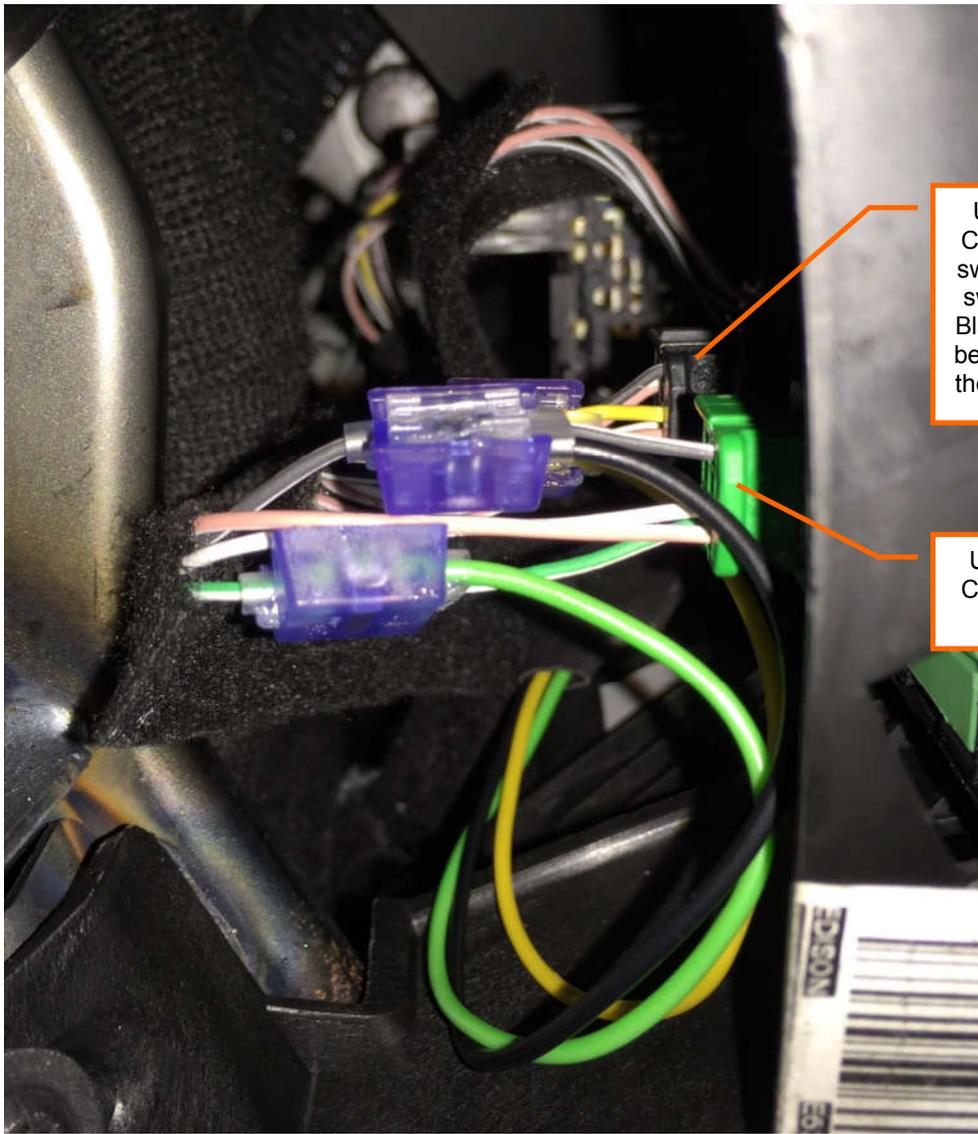


Unplug the Black Connector from the switch. If there is no switch present, the Black Connector will be in the area where the switch would be.

Unplug the Green Connector from the switch.

To remove the Connectors push in on the tab here and pull out.

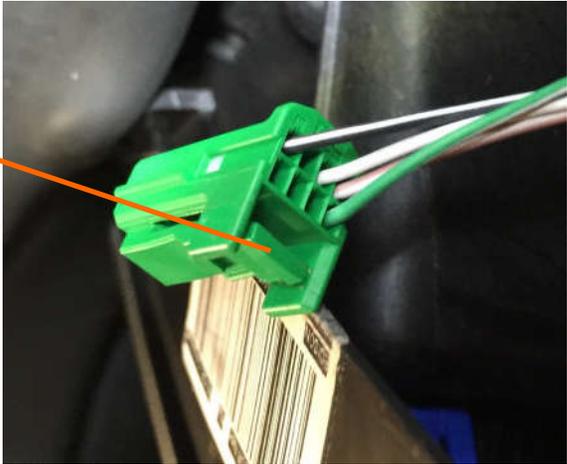

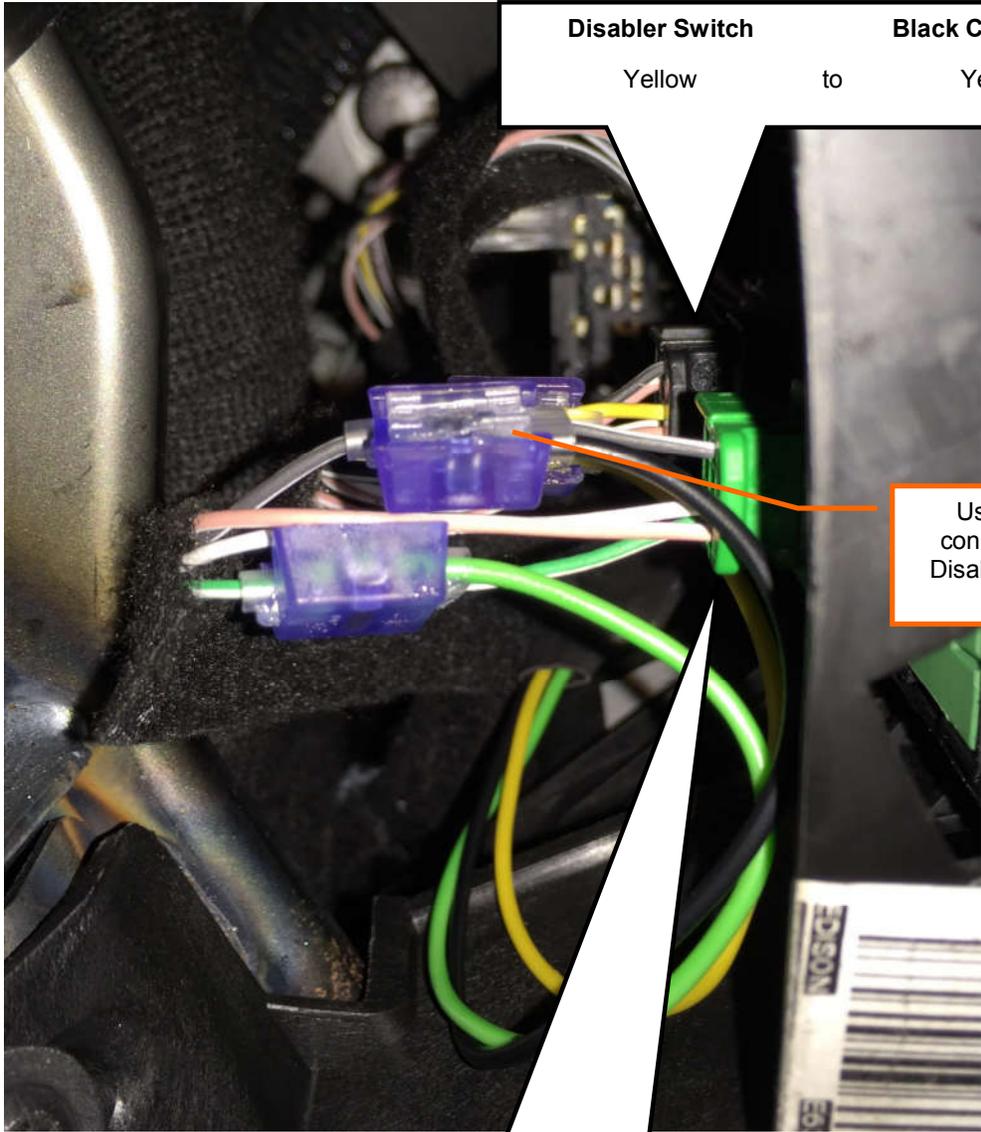

|                        |    |                        |
|------------------------|----|------------------------|
| <b>Disabler Switch</b> |    | <b>Black Connector</b> |
| Yellow                 | to | Yellow                 |

Use the supplied crimp connectors to connect the Disabler Switch wires to the following wires:

|                        |    |                        |
|------------------------|----|------------------------|
| <b>Disabler Switch</b> |    | <b>Black Connector</b> |
| Black                  | to | Black / White          |
| Green                  | to | Green / White          |